Installation and Operation Manual



Model CPS3 Submersible Sump/Effluent Pump

Thank you for purchasing this **CHAMPION PUMP!** The CPS3 is a high quality, energy efficient, heavy duty cast iron 1/3 HP sump/effluent pump. We back these **Champion** products with **Champion** service and a **Champion** attitude. Please read, save, and follow these instructions to ensure **Champion** performance.

BEFORE OPERATION - Important Product and Safety Information - WARNINGS - Personal Injury and/or property damage could result if not adhered to.

- ! Risk of Electric Shock Fatal electric shock could occur. Always disconnect the power source before attempting to install, service, relocate, or check the pump. Never touch pump, pump motor, water, or discharge piping when pump is connected to electrical power. Never enter a wet or flooded area, basement, basin, etc. that is in contact with the pump or electrical circuit before power supply has been disconnected.
- ! Pump has not been investigated for use in swimming pool areas or any area that might reasonably expect aquatic, animal, or human entrance. Precautions should be taken to prevent such entrance during use.
- ! Connect only to a properly grounded, grounding type receptacle. Use of a ground fault circuit interrupter (GFCI) is required for maximum safety.
- ! All wiring must be performed by qualified electrician in accordance with all local and national electric code.
- ! When power source or supply is turned off (in open position) a lock and tag out should be used to prevent accidental power application or activation.
- ! Do not use extension cord or cut off grounding pin. Should be installed on separate 15 AMP circuit breaker.
- ! Use only with a properly sized (input AMPS, volts, HP) motor controller.
- ! Do not use to pump flammable/explosive liquids such as gasoline, fuel oil, kerosene, and /or chemicals, salt water, etc.
- ! Do not use pump in an explosive atmosphere or classified as hazardous per NEC, ANSI/NFPA 70.
- ! Make sure pump is on hard level bottom in sump, do not set directly on earth, gravel, or other debris. This could cause excessive wear or possible jamming and flooding.
- ! Make sure pump is secure in basin and piping is firmly supported so that pump cannot move, not allowing liquid level switch to interfere with basin wall or other obstacle preventing proper operation. Flooding or overheating could occur if not prevented.

CHAMPION PUMP COMPANY Phone: 419–281–4500 1102 Myers Pkwy Ashland, OH 44805 Fax: 419–616–1100

! All basins or sumps must have covers and installed to meet health and plumbing codes with proper sealing and venting. Before opening or entering sump safety precautions per OSHA requirements should be strictly adhered.

General Information

Model CPS3 is a manual sump pump and needs a liquid level motor control switch, 28–0007–0010 vertical switch, 13–0001–1001 float switch to operate properly in the basin. The control switch easily mounts to the discharge piping and is adjustable for different basin and liquid levels. Pump plug is plugged into back of piggyback receptacle on switch cord.

Model CPS3 is also offered with an attached vertical switch (CPS3V) or attached float switch (CPS3A).


CPS3 --- minimum discharge pipe and fitting size - 1 ½"

	Min. Basin Dia.	Approx. on level	Approx. off level
CPS3V	12"	7 1/8"	3"
CPS3A	14"	12 1/4"	5"

These pumps have an air bleed hole and a small stream of water during operations maybe noticed. This is normal.

Dewatering/Sump/Effluent Installation


- Provide proper sump basin size. A larger size is recommended as it allows more reserve, and reduced switching.
- 2. Make sure level control switch has full motion without possible interference or hang up.
- 3. Make sure pump is on solid, clean, debris free base.
- Schedule 40 PVC pipe is recommended, check local code. Hand tighten piping into pump. Install a union or other means of separating discharge line for easy pump removal.
- A full flow check valve is recommended just above or in place
 of the union to prevent water backflow. Connect additional
 piping as needed to direct discharge to desired location.
 Keep piping as short as possible with minimum number of
 turns. Secure piping.
- 6. A ball or gate valve is recommended after the check valve to prevent backflow when removal is necessary.
- 7. In effluent applications check with health and plumbing codes for proper basin size, sealing, venting requirements.
- 8. An audible high water alarm, such as CP Model 1035944 should be installed for additional protection against flooding.
- Check for proper operation once installed and power connected by filling basin with water.

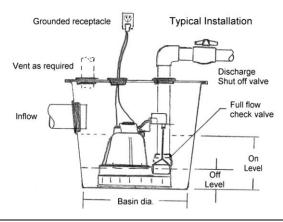

Maintenance and Troubleshooting

	Corrective Action
1. Blown fuse, trip breaker	1. If blown, replace with proper sized fuse or reset breaker.
2. Low line voltage	2. If voltage is under 108 volts, check wiring size.
3. Defective motor 4. Defective float	3. Replace pump 4. Replace float switch
5. Impeller bound	5. If impeller will not turn, remove housing and remove blockage
6. Float obstructed, low water	6. Make sure float moves freely up and down, check level
Backflow of water from piping Raulty float switch	Install or replace check valve Replace float switch
Defective float switch	1. Replace float switch
2. Obstacle in piping, valve shut	2. Remove pump and clean pump and piping, open valve
3. Float obstructed	3. Make sure float move freely up and down
4. Low line voltage	4. If voltage is under 108 volts, check wiring size
5. Too many appliances on circuit	5. Install pump on dedicated circuit. IMPORTANT: Do not use extension cord to power pump
	2. Low line voltage 3. Defective motor 4. Defective float switch 5. Impeller bound 6. Float obstructed, low water 1. Backflow of water from piping 2. Faulty float switch 1. Defective float switch 2. Obstacle in piping, valve shut 3. Float obstructed 4. Low line voltage 5. Too many

Pump operates but delivers little or no water	1. Plugged impeller 2. Check valve installed backwards, or faulty	1. Clean out impeller 2. Reverse position of check valve, or replace
	3. Pump air locked	3. Drill 1/8" hole in discharge line between pump and check valve

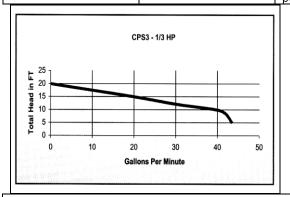



Product Warranty Date of Manufacture and Warranty Tag is on pump cord.

LIMITED WARRANTY: Champion Pump Company, Inc. warrants that products of our manufacture will be free of defects in material and workmanship under normal use and service for 3 years from the date of purchase. The date of purchase shall be determined by a dated sales receipt noting the model and serial number of the pump. The receipt must accompany the pump if the date of the pump returned is more than 3 years from the date code on the pump name plate. We will repair or replace, at our option, to the original purchaser any part or parts of our product found upon our examination to be defective. Be prepared to provide the model number, the date code and/or serial number and proof of the date installed when exercising this warranty. Nameplate tag (Required) is on the pump power cord. All transportation charges on products or parts submitted for repair or replacement must be paid by purchaser. This limited warranty does not cover products which have been damaged as a result of accident, abuse, misuse, neglect, improper installation, improper maintenance, been used in water containing sand, lime, cement, gravel or other abrasives, or failure to operate in accordance with Champion Pump Company. Inc. written instructions. UNDER NO CIRCUMSTANCES WILL WE BE RESPONSIBLE FOR ANY OTHER DIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, LOST INCOME, LABOR CHARGES, DELAYS IN PRODUCTION, IDLE PRODUCTION WHICH DAMAGES ARE CAUSED BY ANY DEFECTS IN MATERIAL AND/OR WORKMANSHIP AND/OR DAMAGE OR DELAYS IN SHIPMENT. THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER EXPRESS OR IMPLIED WARRANTY, INCLUDING ANY WARRANTY OF MERCHANTABILTIY OR FITNESS FOR A PARTICULAR **PURPOSE.** Some states do not allow limitations on how long an implied warranty lasts, or do not allow the exclusions or limitations of incidental or consequential damages, so the above limitations might not apply to you. This limited warranty gives you legal rights, and you may also have other legal rights which vary from state to state.